


Installing Residential Brick Veneer

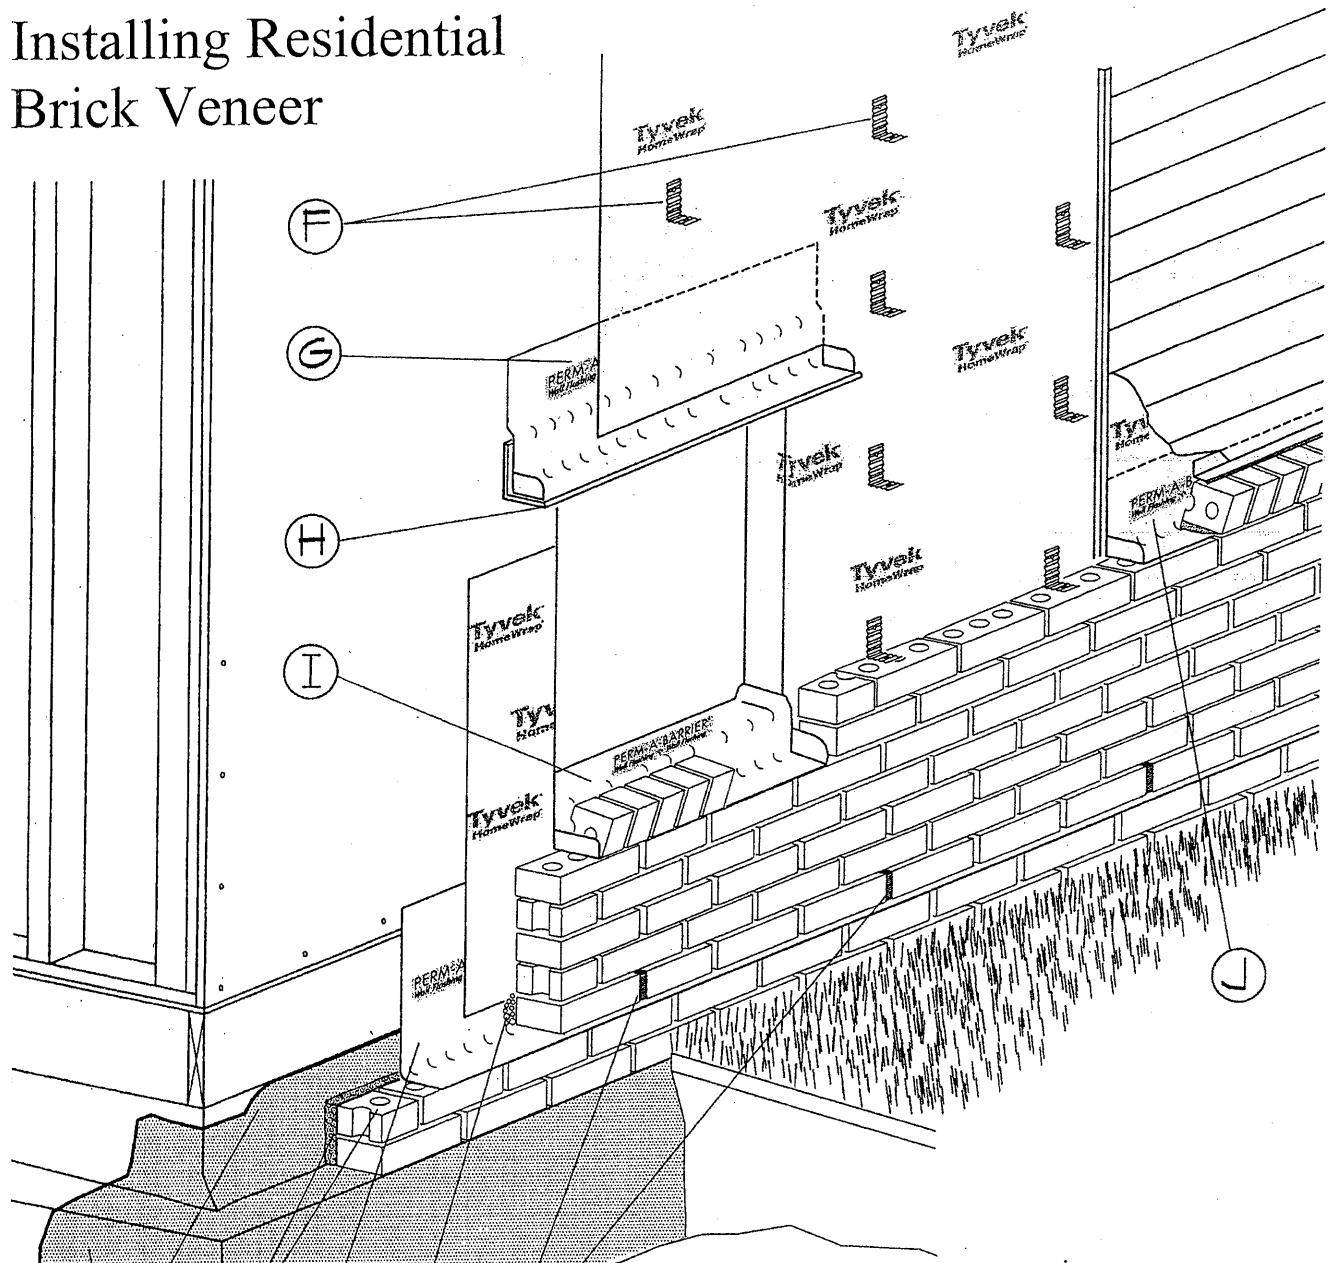

- A.** Terminate foundation waterproofing above future finish grade
- B.** Lay brick coursing to above future grade and fill the collar joint and brick cores solid with mortar
- C.** Install base flashing above grade to face of brick and lap up and under exterior wrap
- D.** Pea stone drainage to top of weep

- E.** Weeps resting on the flashing spaced 32" o.c. minimum
- F.** 22 gauge corrugated wall ties hot dipped per ASTM a153 spaced 16" o.c. w/ 8d hot dipped nails
- G.** Flash to face of angle and turn up and under the exterior wrap
- H.** Optional metal drip edge between angle and flashing membrane
- I.** Sill flashing to face of brick
- J.** Rowlock flashing to face of brick and up and under exterior wrap and siding. Metal flashing 2" x 2" resting on the Rowlock and up and under the siding